2 Ak	kerBP	Deepsea Nordkapp		
Call Sign Location	ZCEW6 Trell			
Position	N59° 37,4' E002° 26,1' Marine Hazards			
Safety zone 500 m				
Rig may be anchored	d with 10 mooring lines in 360° pattern			

Specific Marine Hazards

500m checklist to be forwarded to dsn-dpop@odfjelldrilling.com when completed

See drawing below for the mooring lines

Communications	General	Emergency	UHF channels vessel - deck					
	VHF Ch. 67	VHF Ch. 16	Ch nr.	Tx freq.	PI Tx	Rx freq.	PI Rx	Channel info
	+47 52 91 43 00	VHF CII. 10	2	414.93750	146,2	424.93750	156,7	Deck/Marine
Bridge	dsn-dpop@odfjelldrilling.com		4	416.03750	173,8	426.03750	186,2	Deck/Marine
	dsn-dpop@odjendninng.com		-					
OIM	+47 52 91 43 10							
Olivi	dsn-oim@odfjelldrilling.com							
	+47 51 35 33 29 / 52 91 43 09							
Offshore Logistics	dsn.logistics.offshore@akerbp.com							
Stand by vessel	VHF Ch. 14							

Crane details	SWL	Radius	Operational Crane Limits
Whip (port)	20 t	8-45 m	
Main block (port)	100 t	Sea lift max 14m	HS ≤ 1 (At max lift)
Whip (stbd)	20 t	8-45 m	
Main block (stbd)	100 t	Sea lift max 14m	HS ≤ 1 (At max lift)

Sound Intermittent	Continuous Variable Tone
Light Flashing Yello	w Flashing Yellow

	Bulk Connections	Cargo Transfer Operations		
Diesel	4" Hose c/w 4" TODO connection, WP 27 Bar			
Drill water	4" Hose c/w 4" WECO connection, WP 20 Bar	Cargo Transfer Operations to take place according to;		
Brine	4" TODO connection, WP 27 Bar			
WBM	4" hose c/w 4" WECO connection, WP 27 Bar	55-000277 - Instructions to Master		
Cement	5" Hose c/w 5" WECO connection, WP 10 Bar			
Barite/Bentonite	5" Hose c/w 5" WECO connection, WP 10 Bar			
Base Oil	4" TODO connection, WP 27 Bar			
Urea	4" Hose c/w 4" TODO connection, WP 10 Bar	G-OMO & G-OMO 8-A Safety zone entry checklist		
Pot Water	4" Hose c/w 4" WECO connection, WP 20 Bar	G-OWO & G-OWO 6-A Salety zone entry checklist		
OBM, Slops	4" Hose c/w 4" TODO connection, WP 27 Bar			

Vessel Co-ordination				
1 hour prior to arrival in the field, contact should be made with;	Deepsea Nordkapp bridge VHF CH 67			
Vessel movement within the field are controlled and monitored by;	Equinor Marine VHF CH 14			
Permission to enter safety zone should be obtained from	Deepsea Nordkapp bridge VHF CH 67			
On entry & exit of the safety zone, establish contact and inform;	Deepsea Nordkapp bridge VHF CH 67			


Vessels conducting standby duties


To be located as per instructions and based on current activity.

Radius ID

See attached field drawing

Rev.6 18.01.2024

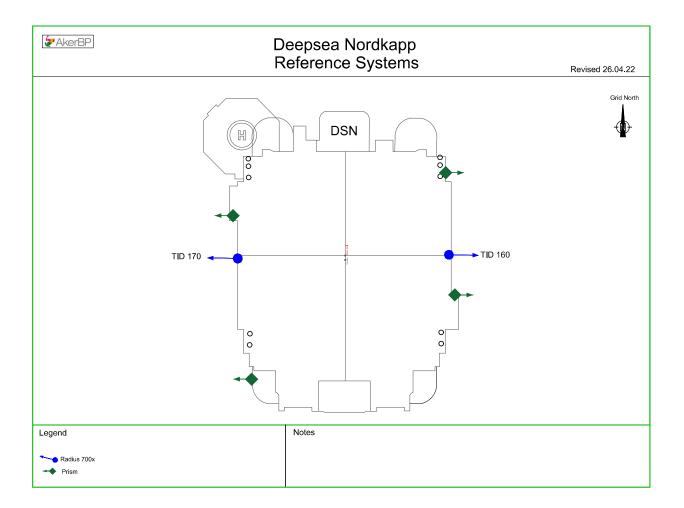

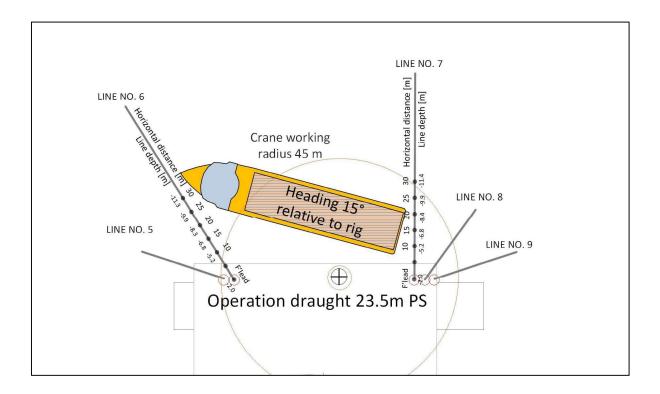

Mooring Line Profile and Crane Coverage Illustrations

