

Call Sign	C6VR7
Location	Tilje Infill
Heading	249 °
Position	Skarv location
Marine Hazards	
Safety zone 500 m	
Rig may be anchored with 8 mooring lines in 360° pattern	



Specific Marine Hazards	
Prior to entering the 500 m safety zone vessels must send the checklist to Scarabeo 8 Control Room Scarabeo8.coop@saipem.com	
See below drawing of anchor chains	

Communications	General	Emergency VHF Ch. 16	Communication vessel - deck					
			Ch nr.	Tx freq.	PI Tx	Rx freq.	PI Rx	Channel info
Control Room	VHF CH 69		8	407.08750	118,8	407.08750	118,8	Deck main
	+47 52 88 42 25		10	457.52500	136,5	457.52500	136,5	Deck backup
OIM	Scarabeo8.coop@saipem.com							
	+ 47 52 88 42 01							
Offshore Logistics	scarabeo8.plmr@saipem.com							
	+47 52 88 42 06							
Stand by vessel	sca8.logistics.offshore@akerbp.com							
	VHF CH 69							

Crane details	Operational Crane Limits
Whip line (port)	17,0 t - 9,4-50 mtr
Main line (port)	32,0 t - 47,5 mtr / 85,0 t - 7,8-18,0 mtr
Whip line (stbd)	17,0 t - 9,4-50 mtr
Main line (stbd)	32,0 t - 47,5 mtr / 85,0 t - 7,8-18,0 mtr

Alarms	Fire & Emergency	Abandon
Sound	Intermittent	Continuous Variable Tone
Light	Flashing Yellow	Flashing Yellow


Bulk Connections		Cargo Transfer Operations
Diesel	4" Todomatic	Cargo Transfer Operations to take place according to;
Drill water	4" hammer lug	
Pot water	4" hammer lug	55-000277 - Instructions to Master
Cement	5" hammer lug	
Barite	5" hammer lug	G-OMO & G-OMO 8-A Safety zone entry checklist
Base Oil	4" Todomatic	
Brine	4" Todomatic	
Liq. Mud	4" Todomatic	
Waste fluid	4" Todomatic	

Vessel Co-ordination	
1 hour prior to arrival in the field, contact should be made with;	Scarabeo 8 Control Room VHF CH 69
Vessel movement within the field are controlled and monitored by;	Scarabeo 8 Control Room and standby vessel VHF CH 69
Permission to enter safety zone should be obtained from	Scarabeo 8 Control Room VHF CH 69
On entry & exit of the safety zone, establish contact and inform;	Scarabeo 8 Control Room VHF CH 69
Vessels conducting standby duties	
To be located as per instructions and based on current activity.	

Radius ID
See attached field drawing

Scarabeo 8 Reference Systems

Revised 24.11.22

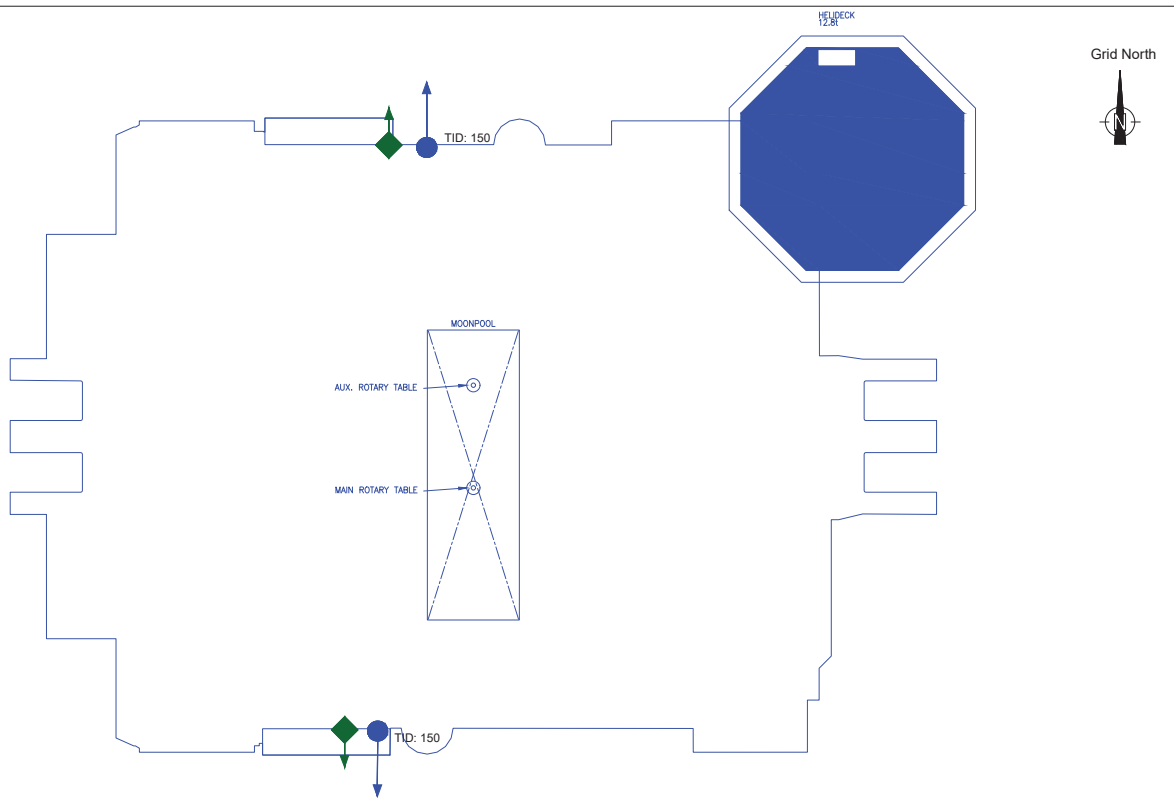

Legend

- Radius 700x
- Prism

Notes

The reference vessel is 93.5m long. The grey sector shows the reach of the main hoist.

