

Call Sign	C6VR7
Location	Bounty
Heading	235 °
Position	N63° 44,8' E06° 56,2'
Marine Hazards	
Safety zone 500 m	
Rig may be anchored with 8 mooring lines in 360° pattern	



Specific Marine Hazards

Prior to entering the 500 m safety zone vessels must send the checklist to Scarabeo 8 Control Room Scarabeo8.coop@saipem.com

See below drawing of anchor chains

Communications	General	Emergency VHF Ch. 16	Communication vessel - deck					
Control Room	VHF CH 69		Ch nr.	Tx freq.	PI Tx	Rx freq.	PI Rx	Channel info
	+47 52 88 42 25		8	407.08750	118,8	407.08750	118,8	Deck main
	Scarabeo8.coop@saipem.com		10	457.52500	136,5	457.52500	136,5	Deck backup
OIM	+ 47 52 88 42 01							
	scarabeo8.plmr@saipem.com							
Offshore Logistics	+47 52 88 42 06							
	sca8.logistics.offshore@akerbp.com							
Stand by vessel	VHF CH 69							

Crane details	Operational Crane Limits
Whip line (port)	17,0 t - 9,4-50 mtr
Main line (port)	32,0 t - 47,5 mtr / 85,0 t - 7,8-18,0 mtr
Whip line (stbd)	17,0 t - 9,4-50 mtr
Main line (stbd)	32,0 t - 47,5 mtr / 85,0 t - 7,8-18,0 mtr

Alarms	Fire & Emergency	Abandon
Sound	Intermittent	Continuous Variable Tone
Light	Flashing Yellow	Flashing Yellow

Bulk Connections		Cargo Transfer Operations
Diesel	4" Todomatic	Cargo Transfer Operations to take place according to; 55-000277 - Instructions to Master G-OMO & G-OMO 8-A Safety zone entry checklist
Drill water	4" hammer lug	
Pot water	4" hammer lug	
Cement	5" hammer lug	
Barite	5" hammer lug	
Base Oil	4" Todomatic	
Brine	4" Todomatic	
Liq. Mud	4" Todomatic	
Waste fluid	4" Todomatic	

Vessel Co-ordination	
1 hour prior to arrival in the field, contact should be made with;	Scarabeo 8 Control Room VHF CH 69
Vessel movement within the field are controlled and monitored by;	Scarabeo 8 Control Room and standby vessel VHF CH 69
Permission to enter safety zone should be obtained from	Scarabeo 8 Control Room VHF CH 69
On entry & exit of the safety zone, establish contact and inform;	Scarabeo 8 Control Room VHF CH 69

Vessels conducting standby duties


To be located as per instructions and based on current activity.

Radius ID

See attached field drawing

Scarabeo 8 Reference Systems

Revised 24.11.22

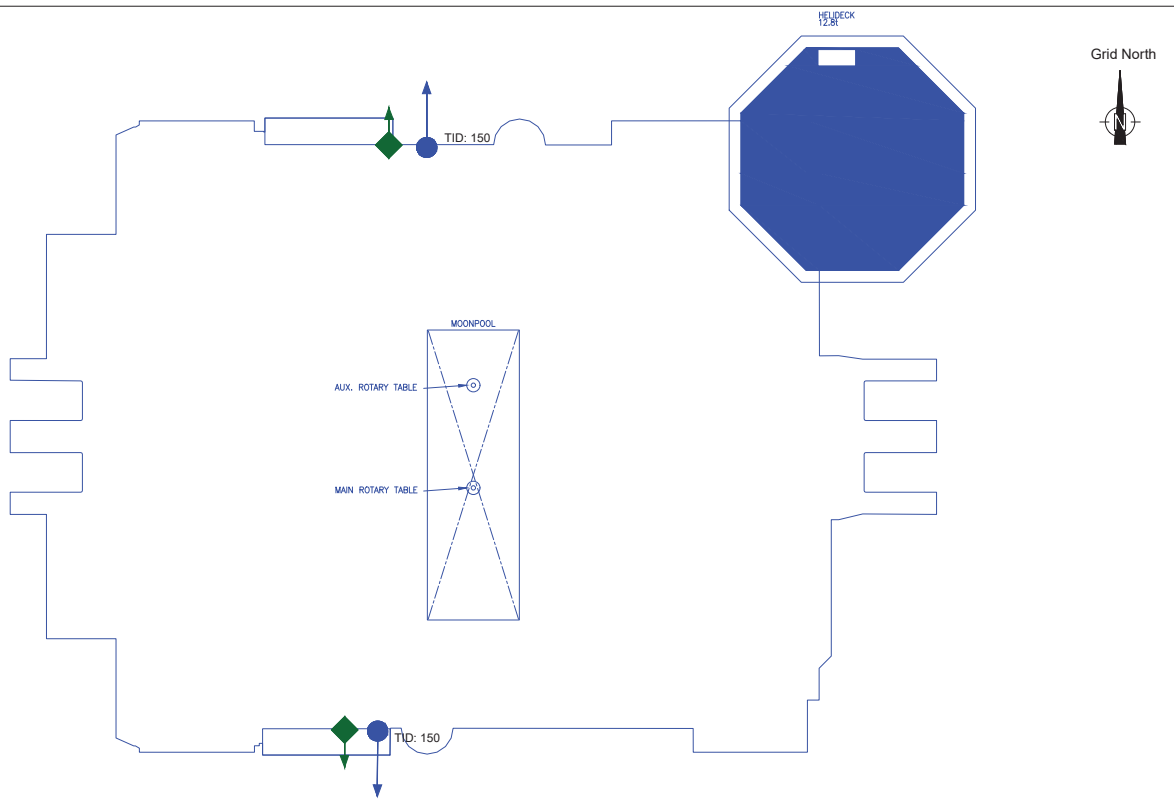

Legend

- Radius 700x
- Prism

Notes

The reference vessel is 93.5m long. The grey sector shows the reach of the main hoist.

